

# Alcolizer LE5

## alcohol tester



### LAW ENFORCEMENT GRADE HANDHELD ALCOHOL TESTER

- ✓ Premium performance law enforcement grade
- ✓ Highly responsive electrochemical fuel cell
- ✓ Module exchange system for fast, easy calibration
- ✓ Standard and Passive breath testing
- ✓ Bluetooth data connectivity

**Alcolizer LE5 – trusted by law enforcement, federal agencies and industrial customers around the world for fast, sophisticated and accurate alcohol testing.**

#### PREMIUM PERFORMANCE LAW ENFORCEMENT GRADE

Alcolizer LE5 has a highly responsive electrochemical fuel cell that delivers fast and accurate results in sophisticated, law enforcement and heavy industrial use applications.

#### MULTI-FUNCTION TESTING

Performs both Active and multiple Passive testing to suit any Drug and Alcohol program.

#### ROBUST AND DURABLE

Designed and made for demanding conditions, the Alcolizer LE5 delivers outstanding performance in rugged and remote environments.

#### CONNECTED FOR MAXIMUM FUNCTIONALITY

Multiple connectivity options include AlcoCONNECT™ Live (connect via the AlcoCONNECT™ mobile app), AlcoCONNECT™ Toolbox for data download, Bluetooth printing and GPS location test logging.

#### SERVICE AND SUPPORT

Each LE5 alcohol sample module has a lifetime warranty under AlcoCARE™. Alcolizer LE5 is supported by a global network of service providers and factory trained professional technicians.

#### FAST, EASY ON-SITE CALIBRATION

In a world-first development, Alcolizer introduced the first breathalyser sample module exchange system that enables calibration to be completed on site in around 60 seconds. This system (explained below) maximises the instrument's availability for testing and achieves long term savings by reducing unit management and unit down-time.

#### LE5 Easy On-site Sample Module Exchange Calibration

<p>Every 6 months, Alcolizer will send a calibrated LE5 replacement sample module.</p>	<p>Using the supplied allen key, remove the screw from the back of the LE5.</p>	<p>Slide off the expired module.</p>	<p>Slide on the calibrated module. Replace the screw. Turn your Alcolizer LE5 on – it is now ready to use!</p>	<p>Return the expired module back in the supplied post bag.</p>

#### STANDARD FEATURES

- Multi-function capability for both Active (Standard) mouthpiece and Passive testing
- Highly responsive, law enforcement grade platinum electrochemical fuel cell
- Easy on-site calibration in 60 seconds.
- Data download of 30,000+ logs
- Unlimited tests
- Transreflective colour LCD screen
- Bluetooth data capability
- AlcoCONNECT™ Toolbox
- USB data download cable
- Multi-language capability
- Silicone protective cover
- 36 month warranty
- AC/DC charger plus vehicle charger
- Soft shoulder bag
- GPS capability
- Proudly designed, developed and made in Australia by Alcolizer Technology to AS3547 Certification Type 2. Alcolizer Technology is an ISO 9001:2015 Certified company.



#### OPTIONS

- Mouthpieces: standard or non-return valve saliva trap
- Security coded programmable settings
- Portable Bluetooth printer and print rolls
- Hard durable waterproof carry cases
- AlcoCONNECT™ mobile app

# AlcoCONNECT mobile




www.alcolizer.com/alcoconnect-mobile

Alcolizer  
technology  
TRUSTED ALWAYS

AlcoCONNECT™ mobile – the ideal tool for Safety and Business Managers seeking real-time mobile enhanced test results.

Enable with AlcoCONNECT™ Live Data Management system.

- ✓ Maximise compliance with photographic evidence
- ✓ Easy input to identify test events and staff
- ✓ Quickly identify staff with NFC or QR codes
- ✓ Print test records on the spot
- ✓ Supervised or unsupervised testing
- ✓ Customise data collection

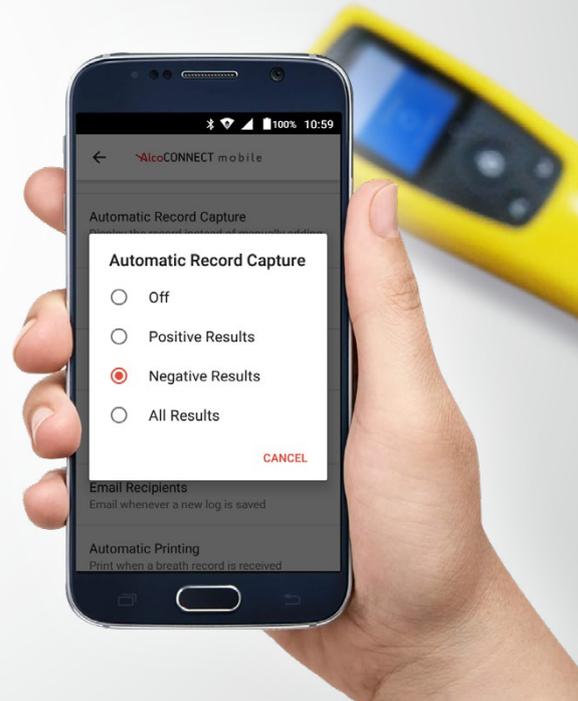

## TECHNICAL SPECIFICATIONS



INSTRUMENT APPLICATION	▶ Law enforcement and Industry
SENSOR TYPE	▶ Law enforcement grade, highly responsive platinum electrochemical fuel cell
ACCURACY	▶ Absolute accuracy to better than 0.005 at 0.100g/100ml (BAC)
BAC RANGE	▶ 0.000 – 0.500g/100ml (BAC)
TEST TIME	▶ Within 3-5 seconds
RECOVERY TIME	▶ Instant for 0.000 BAC readings (retained on screen for 5 seconds)
DISPLAY	▶ Transreflective colour graphics LCD screen
MOUTHPIECE	▶ Standard or non-return valve saliva trap
CALIBRATION	▶ Module exchange system for on-site calibration
OPERATING TEMPERATURE	▶ RANGE -5°C to 50°C
POWER SUPPLY	▶ Rechargeable Li-Ion battery system
WEIGHT	▶ 326g (including battery and cover)
DIMENSIONS	▶ 196mm H x 66mm W x 43mm D

**AlcoCONNECT** AlcoCONNECT™ Live Data Management system combines Alcolizer's innovative testing technology with state-of-the-art business solutions. It is the ideal tool for Safety and Business Managers seeking real time, analysed drug and alcohol test results from across their business.

**AlcoCARE** AlcoCARE™ is a customer support service that provides fast, professional product and technical support for all your Alcolizer products, either on-site or through our efficient return-to-base calibration and support service centre network.

**AlcoTRAIN** Alcolizer's dedicated AlcoTRAIN team focus on developing leading-edge training programs for a wide variety of applications. In addition to the standard training programs, we welcome enquiries to discuss custom training and have a reputation for designing training and educational content to match unique customer needs.

Contact any of our nationwide offices by calling **1300 789 908** or email [sales@alcolizer.com](mailto:sales@alcolizer.com)