Return of the Legendary Gold Detector

GPX-4500

The versatile GPX-4500 has great performance on **all sizes of gold**, and penetrates mineralized ground **deeper** than all basic PI detectors.











- Two Coils Included
- Six Detect Modes
- Six Timings Options
- Five Ground Balance Settings















We Change People's Fortunes





18-inch Monoloop 18-inch Double-D (P/N 3011-0079)



15 x 12-inch Monoloop (P/N 3011-0074) 15 x 12-inch Double-D (P/N 3011-0078)

GPX Accessory Coils

Find more gold of all sizes and at all depths with a specialist Commander accessory coil.



11-inch Monoloop 11-inch Double-D (P/N 3011-0113)



10 x 5-inch Double-D (P/N 3011-0076)









The Expert's Opinion...

"...the Minelab GPX-4500 represents the best value for somebody new to high power pulse induction nugget detecting and wanting to get in on it without mortgaging the farm..."

Steve Herschbach

Owner, Detector Prospector Forum www.detectorprospector.com





Front and Rear Control Panels





Timings For All Ground Conditions

6 Timings in 1 advanced detector



GPX Timings alter the transmit time periods and digital signal processing of MPS technology. Each of the six Timings is superior to a conventional single period Pulse Induction (PI) detector.

Detecting Functions	
Detect Modes	General, Deep and Custom. Custom Modes are: Hi Mineral, Hi Trash, Patch and Test A
Timings	Enhance, Normal, Sensitive Smooth, Salt Course, Sensitive Extra and Sharp
Tune (Noise Cancel)	Automatic and Manual 0-255
Sensitivity Adjust	Rx Gain 1–15
Discrimination	Iron Reject: range 1–10 and All Metal
Ground Balance	Automatic Ground Balance, Fixed and Tracking: Slow, Medium and Fast
Ground Balance Type	General, Specific and Ground Balance Off
Pinpoint	Quick-Trak button
Threshold	Continuously variable 1-turn control
Target Volume Adjust	Volume Limit 1–20
Key Technologies	MPS, DVT, SETA

Minelab®, GPX®, MPS™, DVT™, SETA™ and Commander™ are trademarks of Minelab Electronics Pty Ltd.

Physical Specifications Coils (standard) 11" Double-D and 15"x12" Monoloop Li-lon with built-in amplifier (up to 12 hrs) **Battery** Supplied with mains and vehicle charger **Audio Output** 6.3mm (1/4") headphone/speaker jack Headphones Koss 100 ohm headphones Display Monochrome LCD **Detector Weight** 2.4kg (5.3lbs) (exluding battery) **Detector Length** 1100mm-1300mm (43.3"-51.2")

Visit www.minelab.com to find your nearest dealer

4907-0823-1

MPS" DVT" SETAW-

World's Best Metal Detection Technologies


Minelab Electronics Pty. Ltd. Australia, Asia & Oceania

Minelab Americas Inc. North, South & Central America

+1 630 401 8150 Minelab International Ltd. Europe



+971 4 254 9995

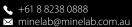

+353 21 423 2352