


Wireless Tag

Wireless Sensor Tag System: Monitor Everything from the Internet

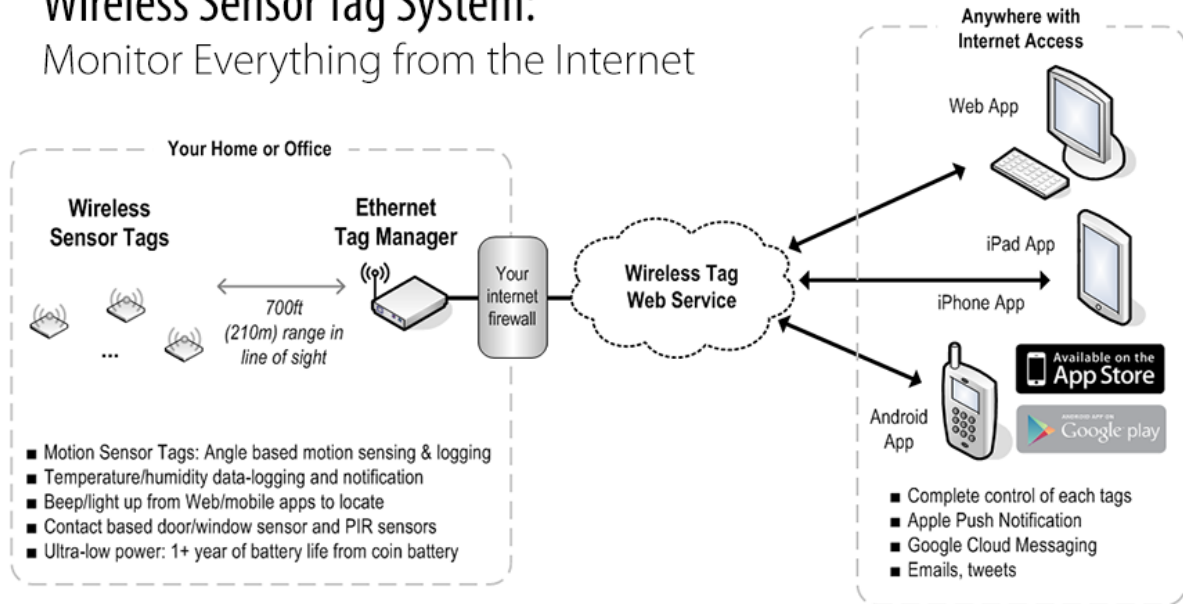

1. The apps and hosting services are FREE. You do not have to buy them. There are no ongoing fees.

2. You do require at least one ethernet tag manager per location.

Wireless Tag Temperature Sensor



Wireless tag for monitoring temperature, humidity and movement.

Accuracy: 0.4°C

Range: 100m line of sight

Update frequency: 1 min - 60 min.

Battery: CR2032 (replaceable)

Battery life: Up to 1 year (depending upon update frequency)

Applications: Specifically designed for fixed items at a single location. It can be used to monitor temperature but also has basic alarm functionality including being able to monitor movement of assets or door/window movement.

NOTE: You must have at least one Wireless Tag Ethernet Hub for the system to work.



Wireless tag ethernet hub The Wireless Tag Ethernet Hub is the link between your wireless tags and the cloud. It is responsible for monitoring all tags and then uploading results to the server in the cloud.

- Can communicate with maximum 255 Wireless Sensor Tags (all types).
- Can be controlled from iPhone, iPad, Android devices through apps, PC and Mac
- Requires an ethernet connection. This could be to an ADSL/cable modem or router. If only wireless is available then a WiFi router/repeater with a spare ethernet port is required. Requires Internet connection.
- Work with both old and new sensor tags, and will support all of our future wireless sensor tag product line products.
- No subscription fees of any kind for life.
- Incredibly easy to use. Just plug it in and go to the web site to add it to your account. It will automatically connect to your network and then to the internet. In most large companies it will successfully install without support from the IT department.